<image>

X30 MONITOR TRAINING ICT Module 5: Reference Sheet


Step 1



• Follow the original X30 user guide from Chapters 1-9. At this stage, you will have:



Loaded a field and created a job.

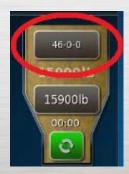

Added Products to each tank

Performed calibration tests on all tanks



ICT MODULE 5: REFERENCE SHEET

STEP 2



- From the Seeder-Home Screen;
 - Turn On each Tank
 - Ensure your Job Settings are correct
 - Review your Requested Rates are correct
 - Slide the Section State window down to reveal ICT-SECTION






Step 3

SERIES

- On the Mapping Screen:
 - Engage each section
 - Coverage Area; Toggle Full Width to ICT-SECTION
 - Turn ASC OFF and then turn ASC ON (this must be performed)
 - Boundary Limit: Headland
 - Engage the Virtual Master Switch
 - When the countdown timer reaches 2 seconds Drive forward.
 - Seeder will change to the color Green when the Sections / Metering are active.

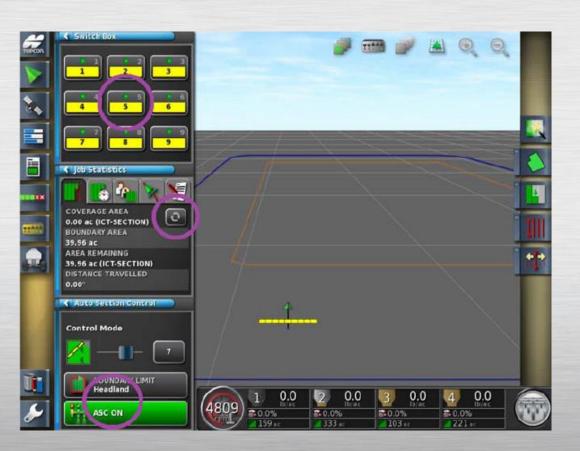



ICT MODULE 5: REFERENCE SHEET

