


M MORRIS
C2 CONTOUR

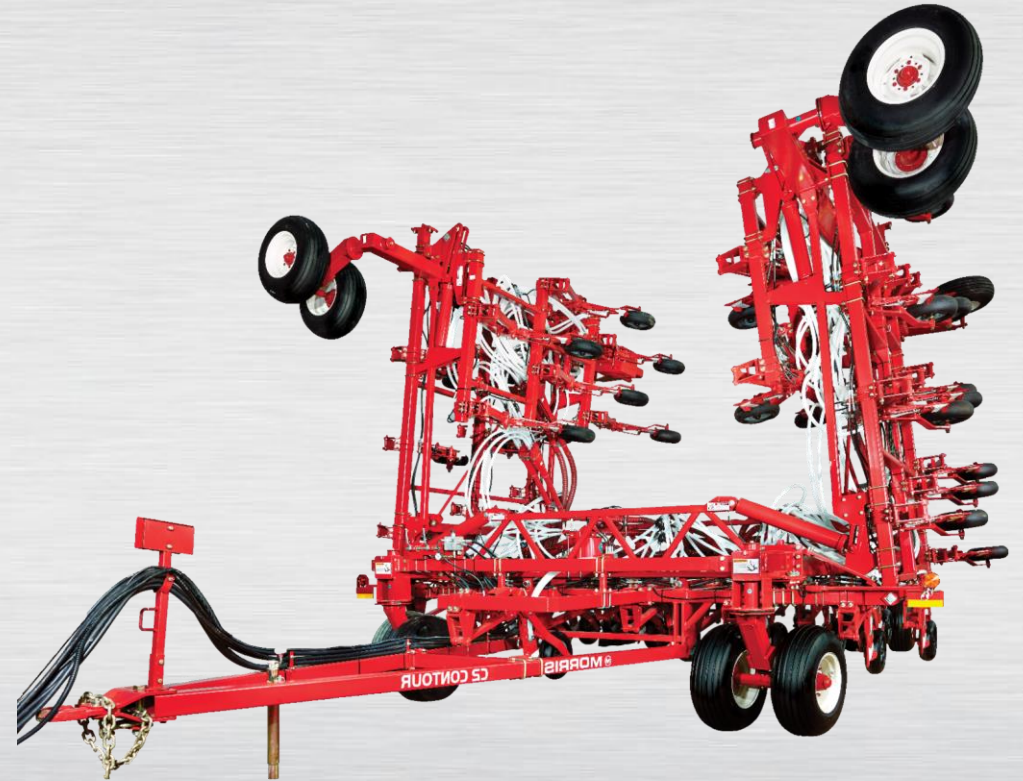

C2 DRILL TRAINING


Module 6: Replacing IP Boot Wear Guard

PURPOSE

- The wear guard (S56459) in between the IP Boot and the C2 shank may wear over time and cause damage to the IP boot if not checked regularly.
- Use the following procedure to replace wear guards as needed.

STEP 1

- The wear plate may need to be replaced after a number of acres, this is highlighted in the picture on the right.
- Use 9/16" wrenches to remove the 3/8" bolts.

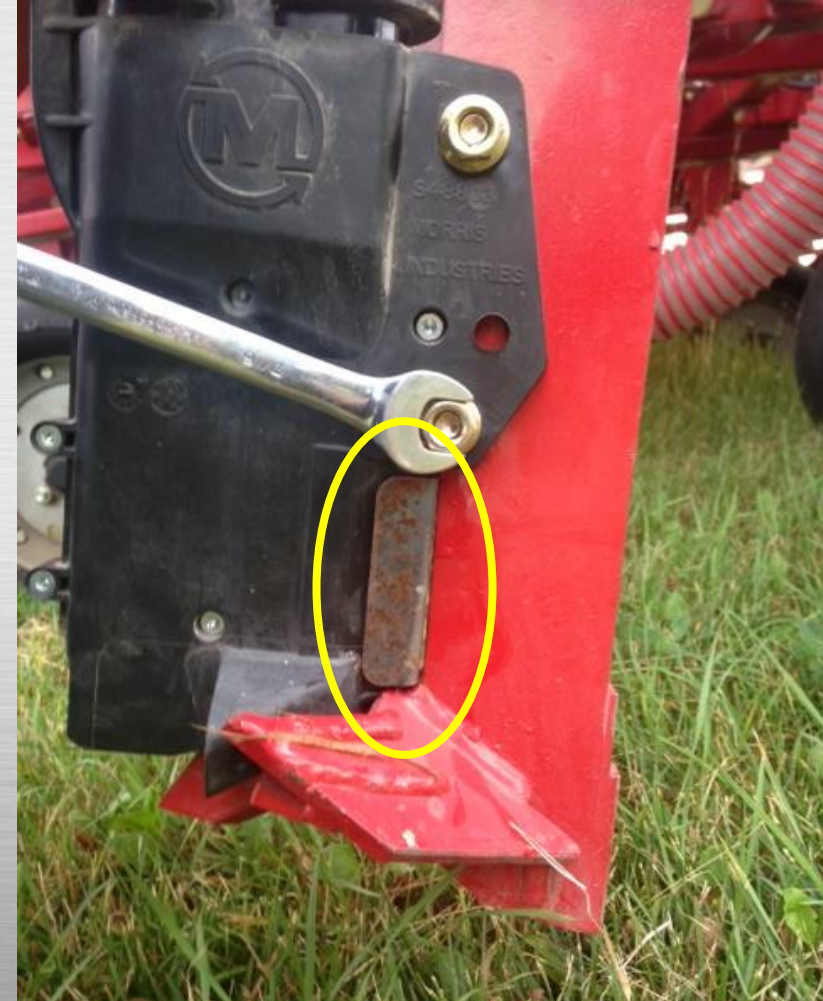


STEP 2

- Once the bolts have been removed, pull the boot back and remove the wear guard.




STEP 3

- Insert the new wear guard, ensuring the locating dowel in the boot fits securely into the locating notch of the opener.

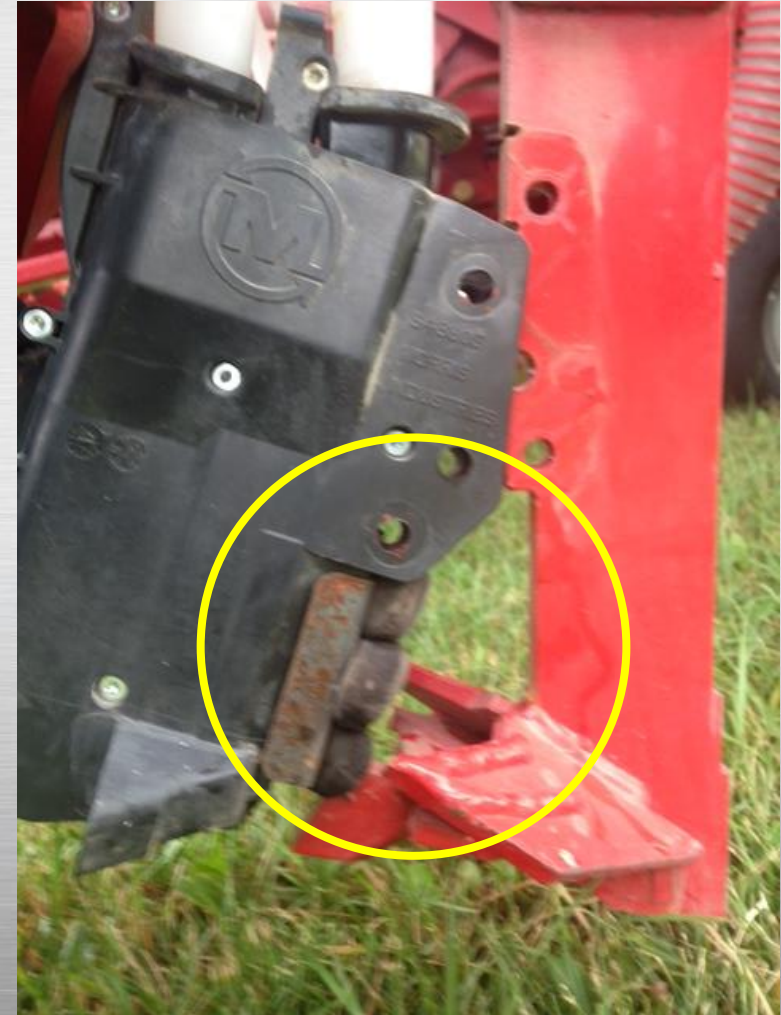

STEP 3 CONTINUED

- Insert the new wear guard, ensuring the locating dowel in the boot fits securely into the locating notch of the opener.
- It should fit similarly to the picture shown here:

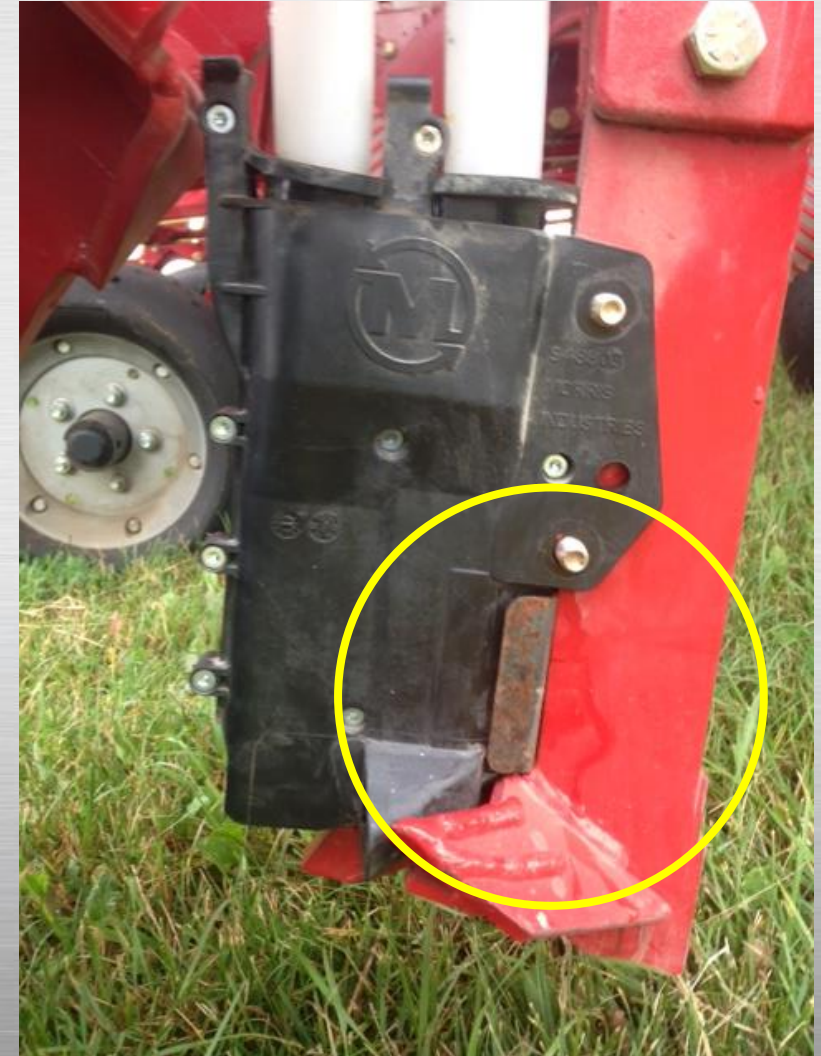

STEP 4

- Once in place, insert the bolts and snug up the lock nuts.
- You may also consider using blue thread lock.

