

# Ground Drive

## Installing Monitor

- Locate monitor and clutch switch in a convenient location in cab.
- Connect power cables directly to a 12V battery.
  - White or Red wires **positive**.
  - Black wires **negative**.
- Route cable harness to seeding tool and Air Cart. Ensure cables clear any pinch points (i.e. tractor articulation point, hitch point, etc.)
- Program monitor as described in *System Installation* and *Monitor Programming* Sections.

**Note:** Locate monitor, power and ground wires away from radio and antenna if tractor is so equipped.

**Note:** Do not connect monitor directly to starter switch.



## Installing Monitor

- Locate monitor, variable rate console and controller/override switch in a convenient location in cab.
- Connect power cables directly to a 12V battery.
  - White or Red wires **positive**.
  - Black wires **negative**.
- Route cable harness to seeding tool and Air Cart. Ensure cables clear any pinch points (i.e. tractor articulation point, hitch point, etc.)
- Program monitor as described in *System Installation* and *Monitor Programming* Sections.

**Note:** Locate monitor, power and ground wires away from radio and antenna if tractor is so equipped.

**Note:** Do not connect monitor directly to starter switch.

